



OR37R SST PRO MAG PLANER, YELLOW



SCAN FOR
DIGITAL
VERSION
OF THE
OFF SHORE
RELEASE



The SST Pro Mag Planer is the top choice of pro anglers and is designed to pull large, heavy baits better than any other in line planer! The SST Pro Mag Planer is ready to run out of the package with no modifications needed. The OR16 (red) clip on the tail of the board ensures that your board will stay on your fishing line.

MAKE SURE TO PLACE YOUR LINE BEHIND ITS CENTER PIN ON THE OR16 AS INDICATED.

From our Mag Tadpoles, weighted steel, copper, and lead core lines to 1 lb. balls and big Skipjack, the SST Pro Mag Planer is the perfect choice to do the heavy lifting and bring more fish to your boat!

**OR18
Snapper Release
comes as
Standard Equipment
on this Planer!**



This Package Includes:

One each of the following:

Yellow SST Pro Mag Planer with Stationary Flag,
OR18 Release (black) with Lock Nut,
OR16 Clip (red) with Split Ring
and Instructions.



Line placement
in (red) OR16 Clip.

OR37R



0 23072 11602 8

RIGHT

For more tips and information go to **offshoretackle.com**

"Your Leader In Trolling Technology" • Made in the U.S.A.

WARNING: This product contains less than 1% lead, a chemical known to cause cancer, birth defects, and other reproductive harm. Wash your hands after handling this product.



More instructions on reverse side.

ASSEMBLING AND USING THE BOARD:

After removing the board from the package, correctly position the OR18 Snapper Release on the bracket, by loosening the lock nut on the 6/32 screw and pivot the OR18 (black) release into position. Make sure that the plastic pin on the bracket is secured into the hole in front of the 6/32 screw of the OR18 then tighten the lock nut back onto the 6/32 screw.

Place fishing line behind the pin protruding through the center of the OR16 (red) clip as shown on reverse side.

When using braided or super lines without a monofilament backer, make sure to twist the line by grabbing the fishing line and twisting the line/board as shown.

The twisted braided or super lines without a monofilament backer will look like this.

Then place your fishing line into the OR18 Snapper Release on the bracket and let the board out to the side of the boat to the desired distance you want your board to run and catch some fish!

(Placing your fishing line into the OR18 as shown allows the board to trip off of the rod line).

(Placing your fishing line into the OR18 in this manner keeps your board attached to the rod line without coming off).

Note: To hold some lines, the tension of the OR18 may need to be adjusted. To increase tension, slightly turn the screw on the bottom of the OR18 clockwise. Small increments can make a big difference; do not overtighten.

All information available 24/7 on our website at
www.offshoretackle.com